 
 











INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITÍ / MONTÁŽNÍ INSTRUKCE
ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ


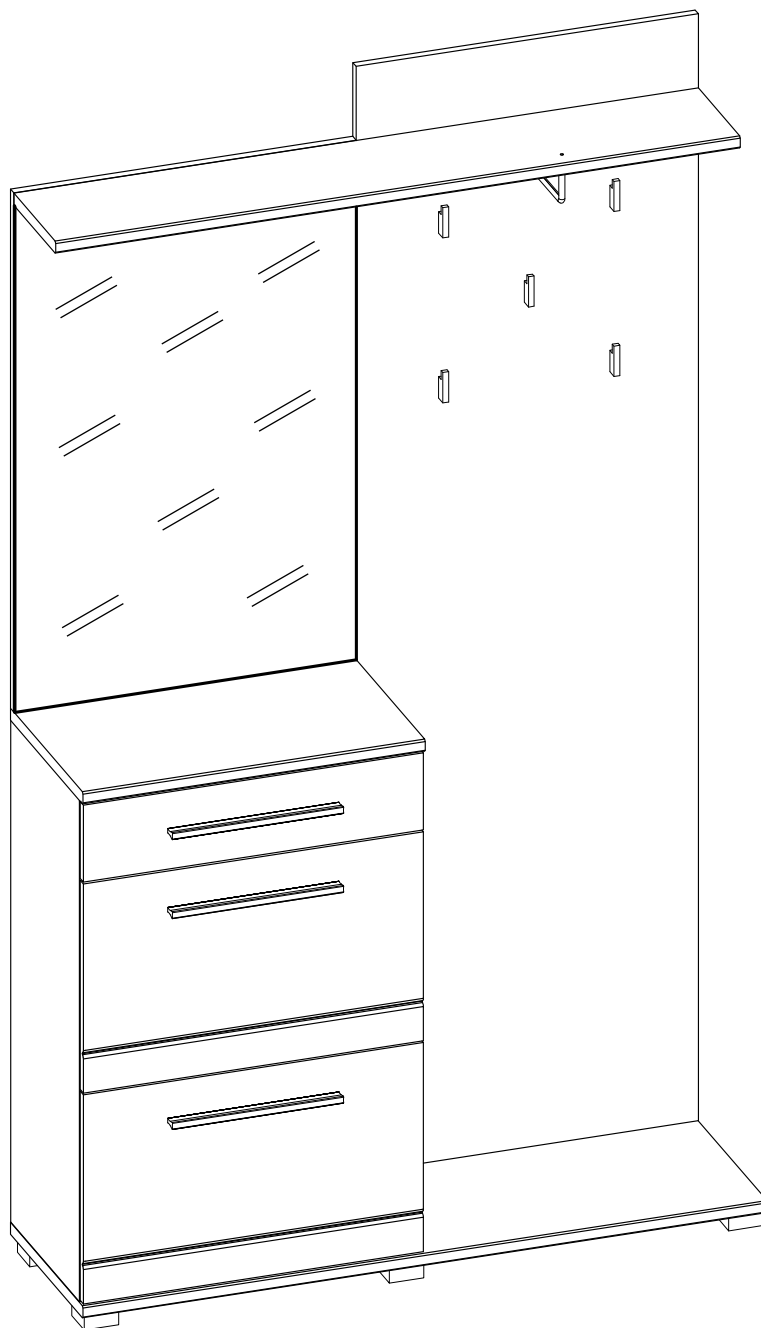











OKUCIA SĄ W PACZCE NR 1. / KOVANIE KTORÉ SA NÁCHADZA V SKRINKE NR 1.
KOVÁNÍ OBSAŽENÉ V BALENÍ NR 1. / ФУРНИТУРА, НАХОДЯЩАЯСЯ В УПАКОВКЕ NR 1.
A CSOMAGBAN TALÁLHATÓ BÚTORSZERELVÉNYEK NR 1.

         INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITÍ / MONTÁŽNÍ INSTRUKCE
ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ








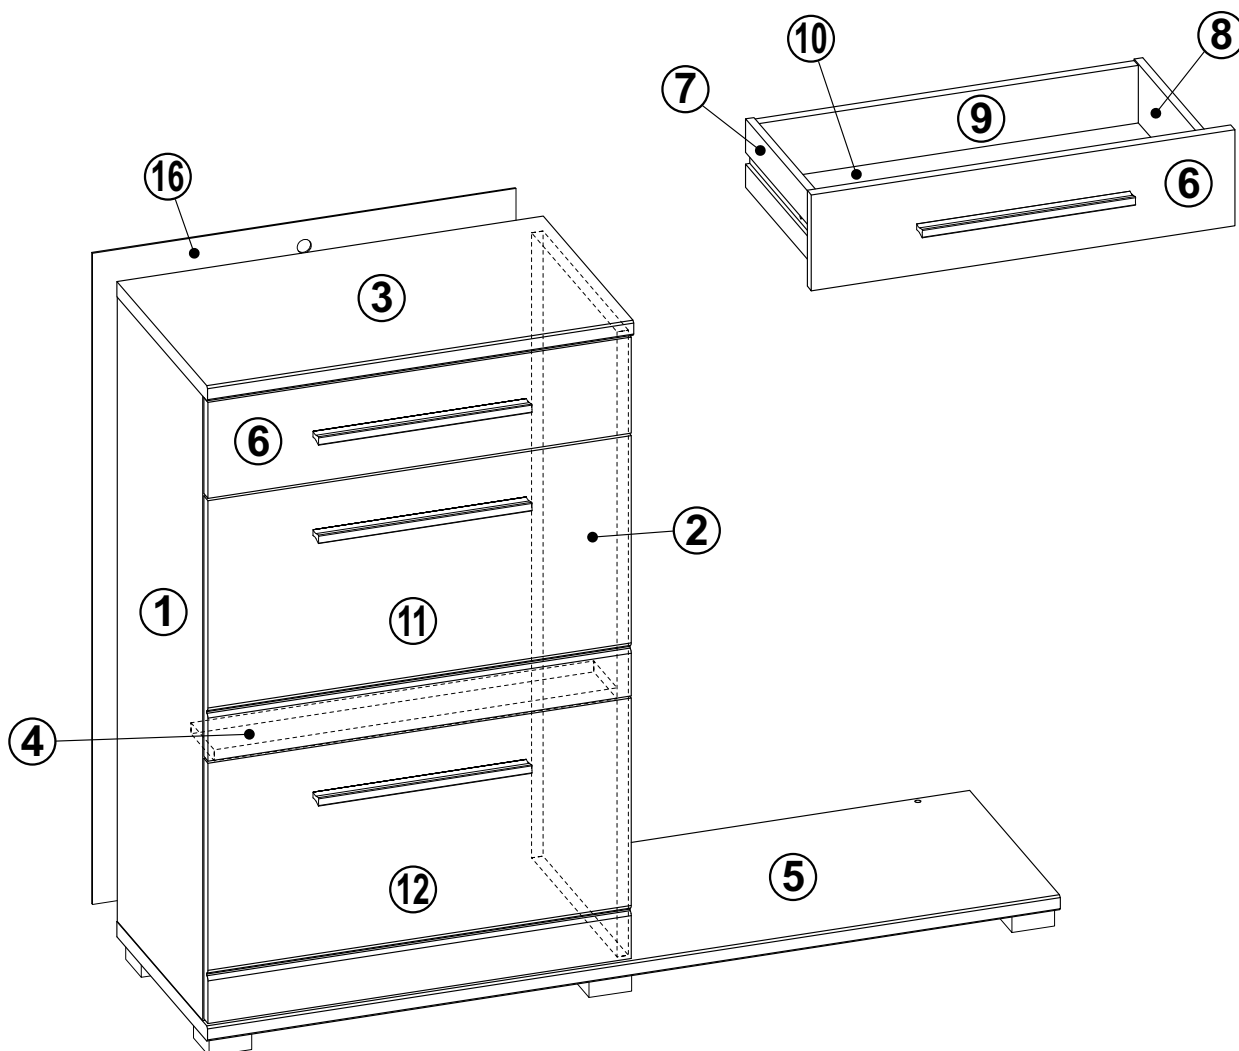


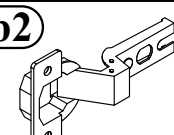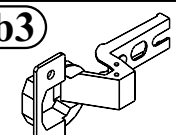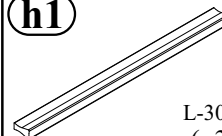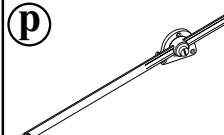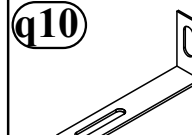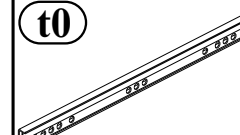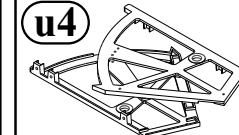a1  8x35 x...(x14)	b02  x....(x4)	b2  x....(x2)	b3  x....(x2)	c1  Euro 4x13 x....(x8)	c2  Euro 5x13 x....(x4)	c3  Euro 6x16 x....(x12)	e0  x....(x10)		
e1  x...(x10)	f1  x...(x10)	h1  L-300 x....(x3)	i2  4x16 x....(x1)	i8  4x27 x....(x6)	i11  4x30 x....(x12)	k1  4x9 x....(x2)	m  x....(x1)	n1  3x16 x....(x40)	n2  3,5x16 x....(x18)
o13  x....(x6)	p  x....(x2)	p0  x....(x2)	q10  x....(x1)	s  x....(x1)	t0  x....(x2)	u4  x....(x2)			



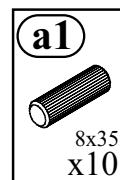 
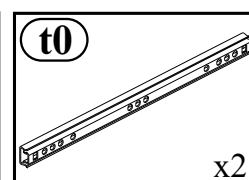 


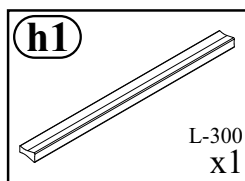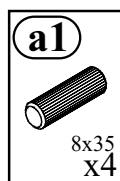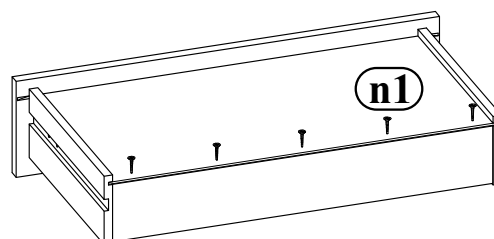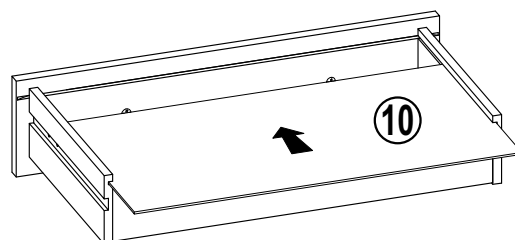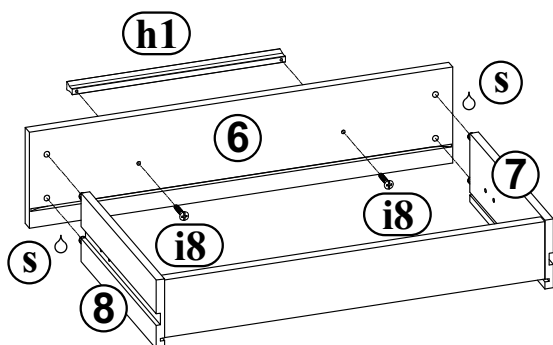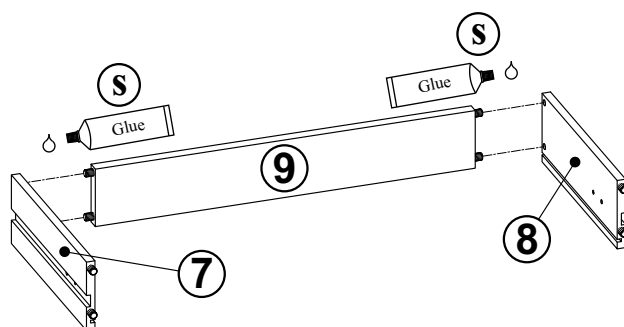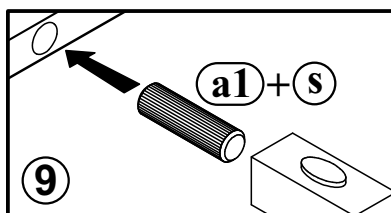         








3

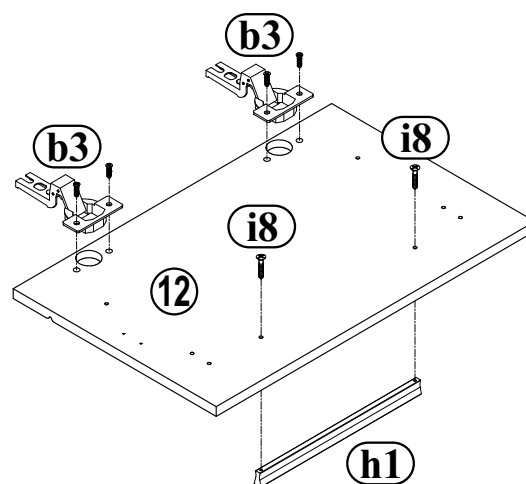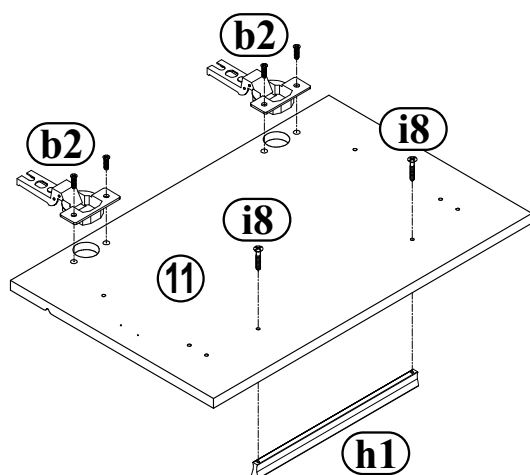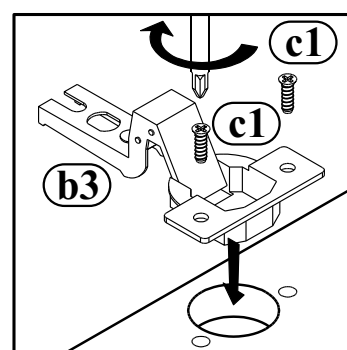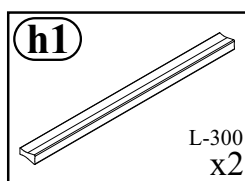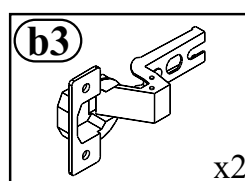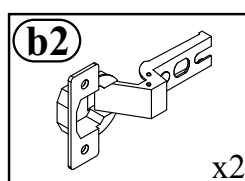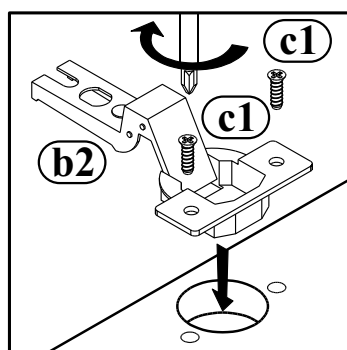        




4

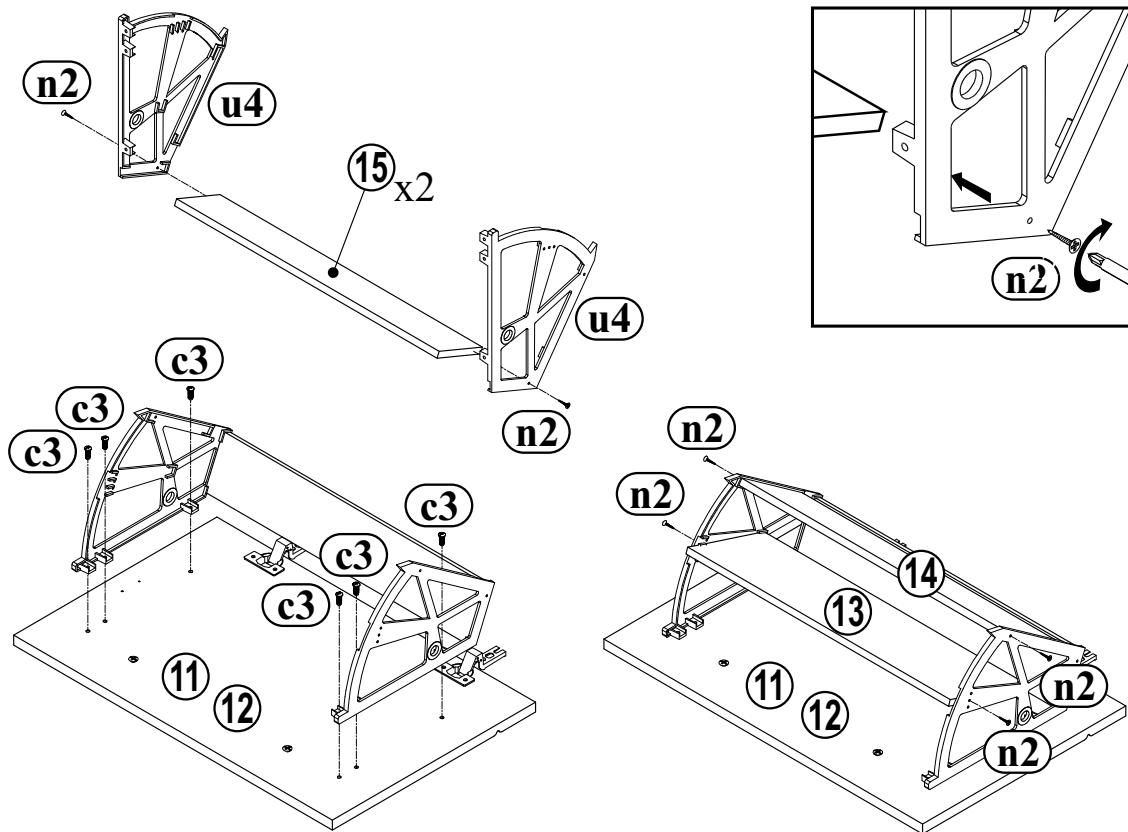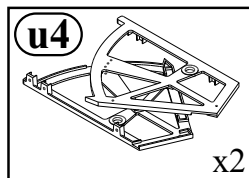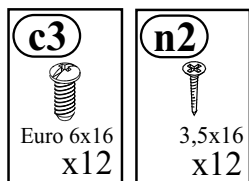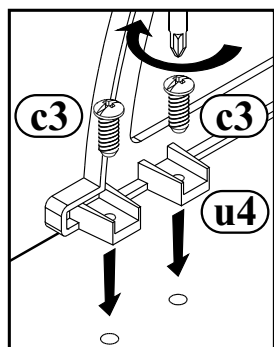    













5

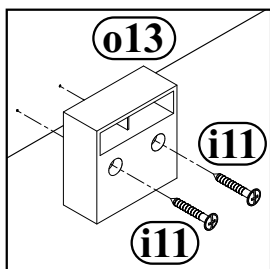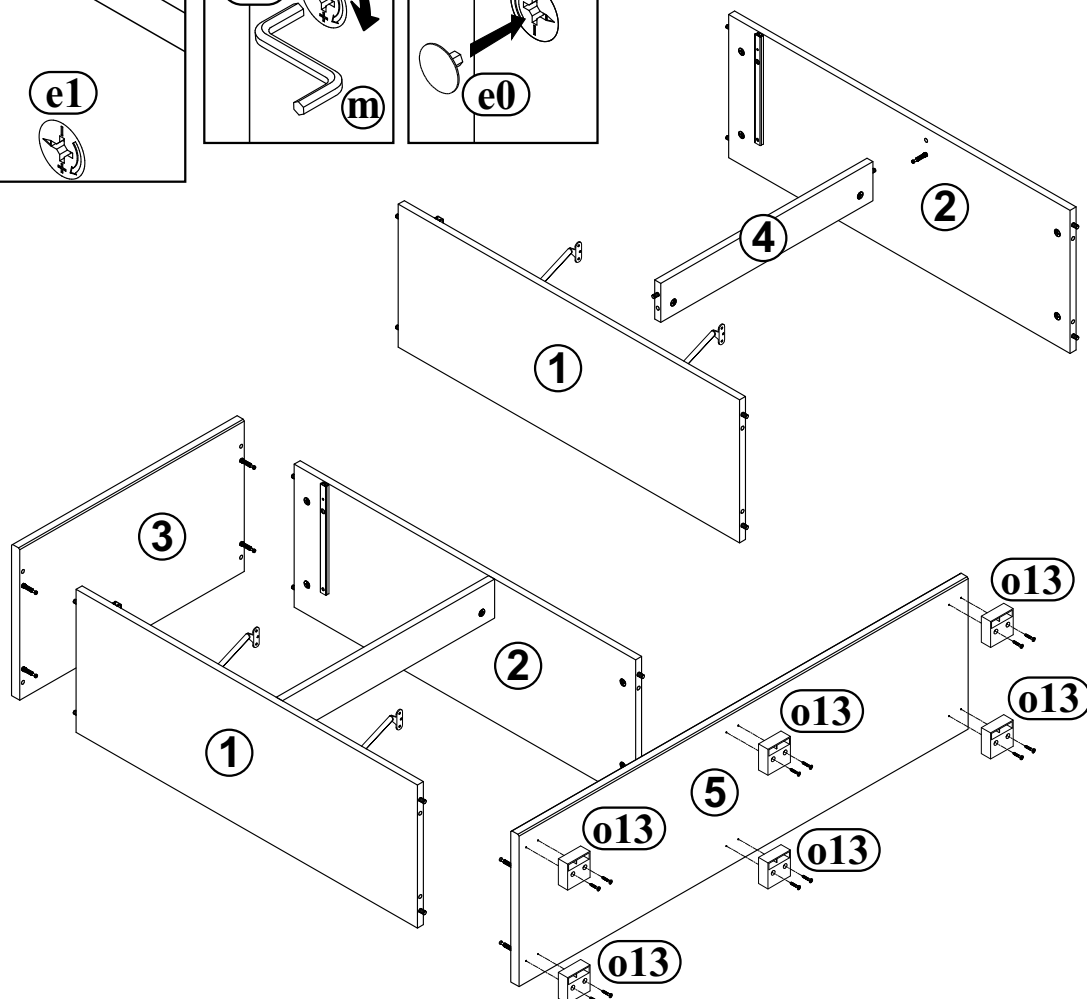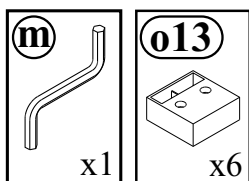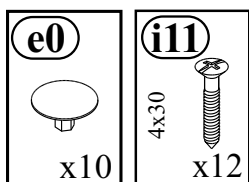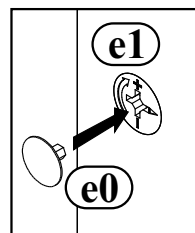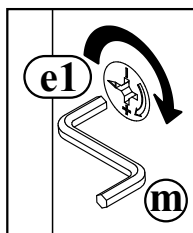      
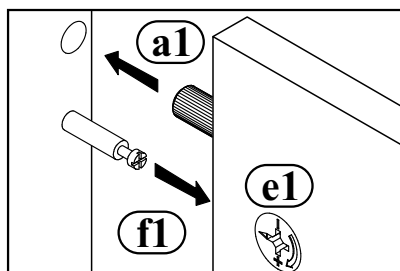 


6

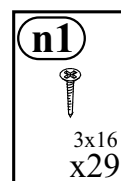 
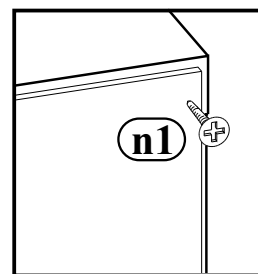 
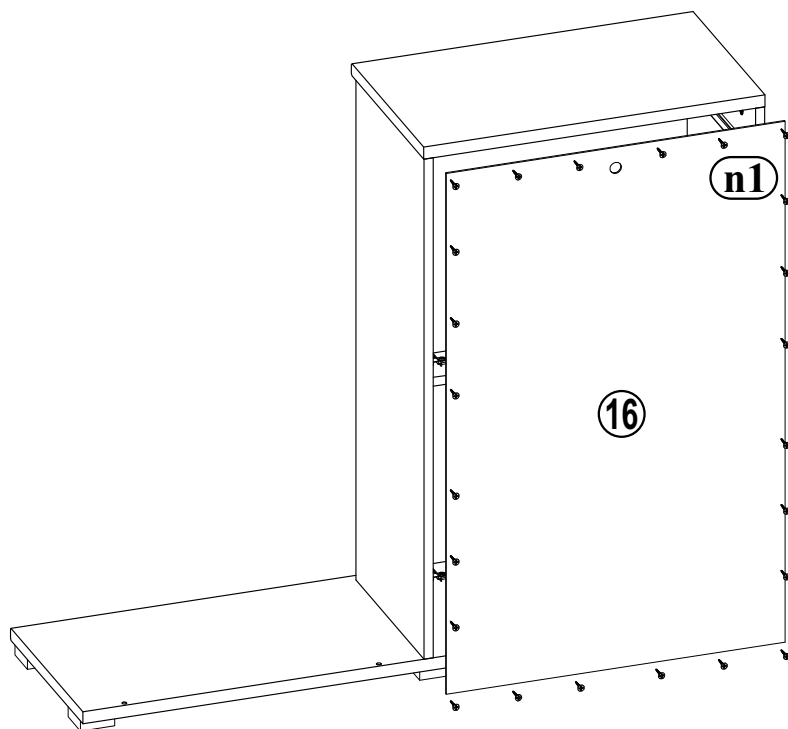 


7

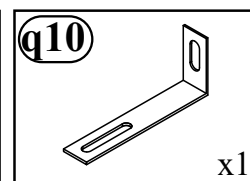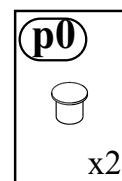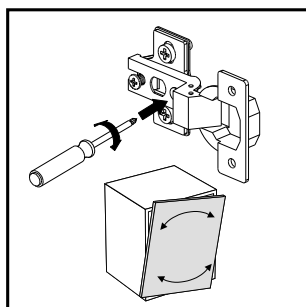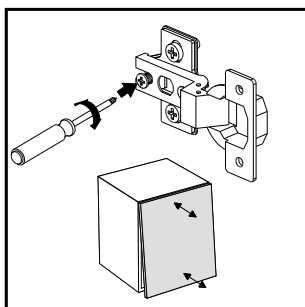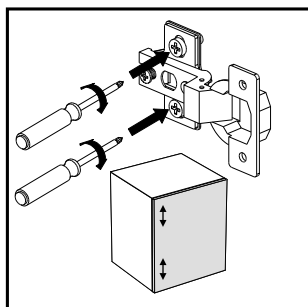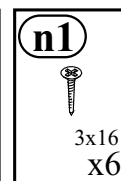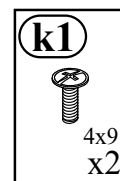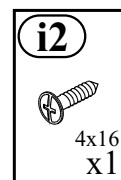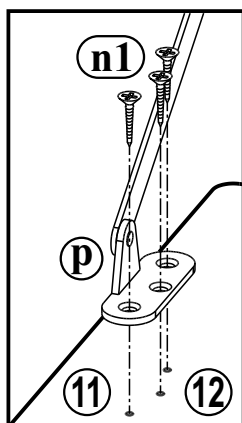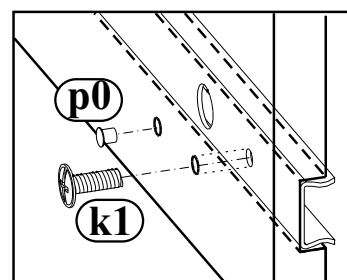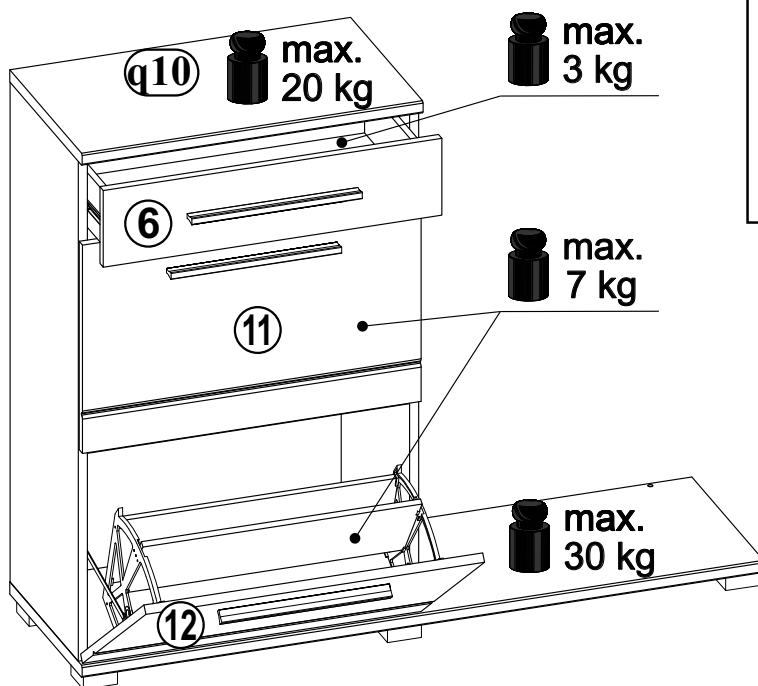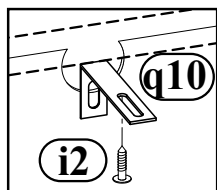            

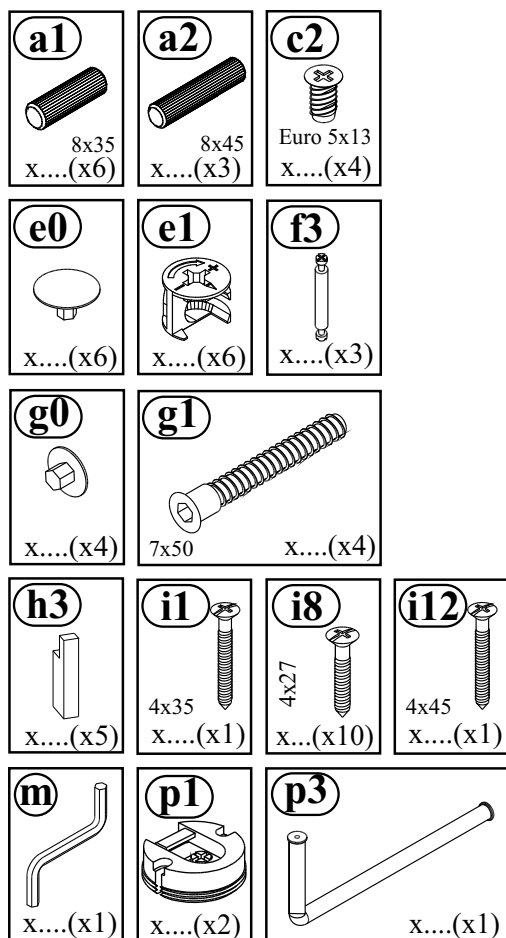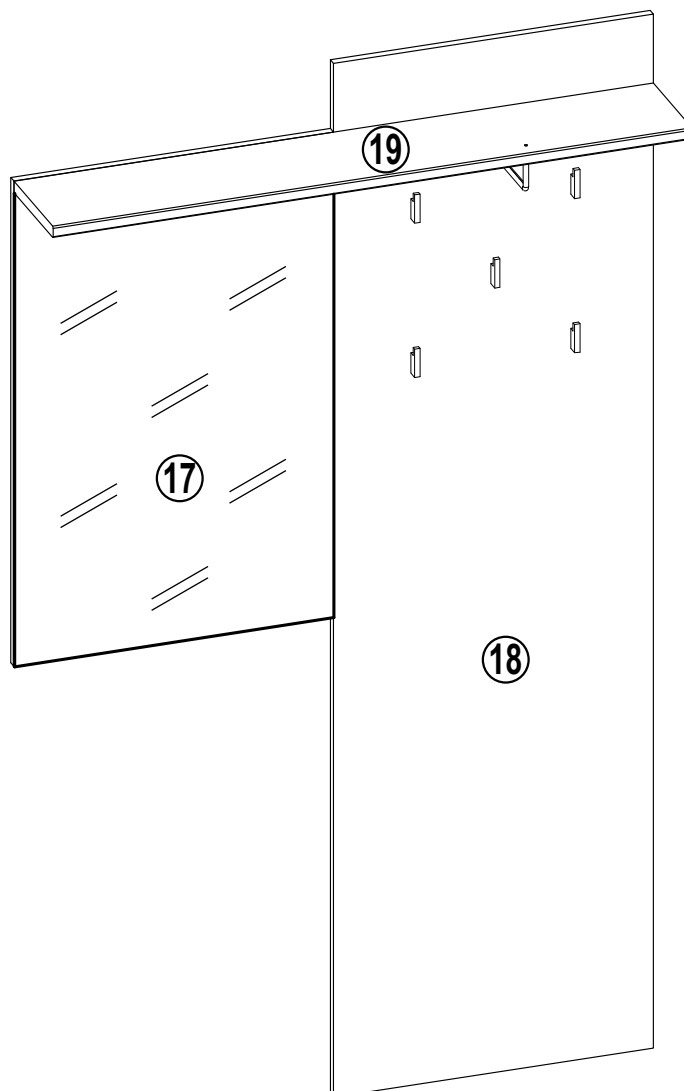  INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITIE / MONTÁŽNÍ INSTRUKCE
ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ

   1

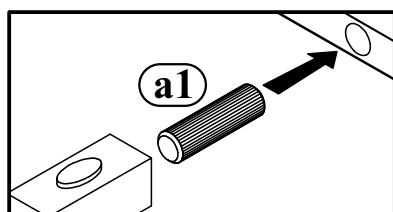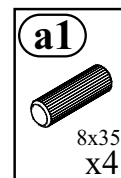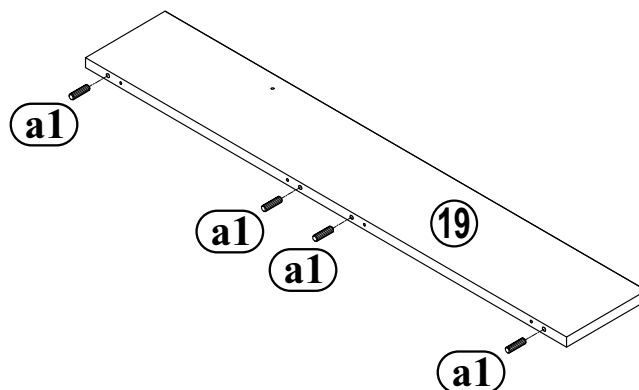

p1

x2

4

