


www.MLMEBLE.pl

GB assembly instructions / D montageanleitung / CZ montážní návod / SK montážny návod / RU инструкции по монтажу / LT surinkimo instrukcija



INSTRUKCJA MONTAŻU


OLIWIER 08/S
124 138 41

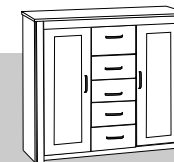

akcesoria / accessories / zubehör / příslušenství / prislušenstvo / аксесуары / furnitūra :

x 36 KK 8/32	x 26 KT 6,3/50	x 14 ZA N	x 100 GZ 1,4/25	x 8 SG 8/8	x 24 MD	x 24 ZAM	x 16 PA Ø5	x 76 WT 3,5x16	x 7 UTO	x 14 WT 4x27
x 2 WT 4x30	x 4 WT 3x10	x 1 ZBL	x 1 ZBP	x 6 ZPR	x 2 PK MH-0	x 6 PK H-0	x 12 WE 6,3x30	x 14 BDR	x 4 PA L350	x 2 KT 50
x 6 DPP 03	x 2 ZPL	x 2 ZPP	x 1 PK 25	x 1 SK	x 1 OA	x 1 AOA	x 1 klej / glue / kleber / lepidlo / lepidlo / kлей / kljaj	x 1 kluczyk / key / schlüssel / klíč / kľúč / kľuč / raktas		

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės

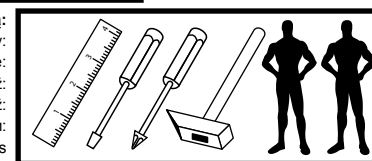

UWAGA! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holi "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

