




www.MLMEBLE.pl

GB D CZ SK RUS LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija

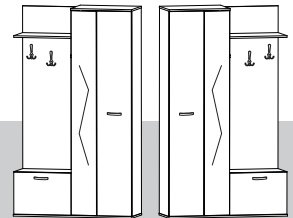


INSTRUKCJA MONTAŻU

PRZ 117-01
202 117 41

akcesoria / accessories / zubehör / příslušenství / prislušenstvo / аксесуары / furnitūra :

x 12 KK 8/32	x 20 KT 6,3/50	x 1 kluczyk / key / schlüssel / klíč / klúč / ключ / raktas	x 1 klej / glue / kleber / lepidlo / lepidlo / клеј / klijat	x 50 GZ 1,4/25	x 6 SA H20	x 12 MD	x 12 ZAM	x 4 PA Ø5	x 2 UT L96	x 20 WT 3,5x16
x 4 WT 3x16	x 4 WT 4x35	x 16 WE 6,3x13	x 6 WT 3,5x20	x 20 ZAN	x 1 WK 2N	x 2 WK 3N	x 6 ZA 110°	x 6 PK H-0	x 1 WW	x 1 RN
x 2 PK H-4	x 2 ZPW									

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės

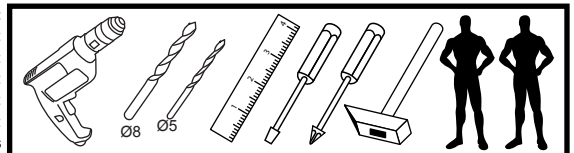

UWAGA! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

Nr/No	Szt/Qty
1	1
2	1
3	1
4	1
5	2
6	1
7	1
8	1
9	1
10	1
11	1
12	1
13	1

