




www.MLMEBLE.pl

GB D CZ SK RUS LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija

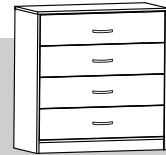


INSTRUKCJA MONTAŻU

KOMODA 03
 94 92 40

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :

x 30 KK 8/32	x 8 KT 6,3/50	x 20 MD	x 8 ZAM	x 5 SG 8/8	x 56 WT 3,5x16	x 6 SP	x 4 UT L96	x 8 WT 4x35	x 4 WS L350	x 4 PA L350
x 50 GZ 1,4/25	x 1 LT	x 1 kluczyk / key / schlüssel / klíč / ključ / ключ / raktas	x 1 klej / glue / kleber / lepidlo / lepidlo / клей / klīja							

do montażu potrzebne są:
 are needed for assembly:
 sind erforderlich für die montage:
 jsou potřebné pro montáž:
 sú potrebné pre montáž:
 которые необходимы для сборки:
 Surinkimui reikės:

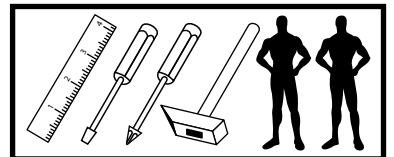

UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

	CODE			
1	KOMODA03_01	916	403	1
2	KOMODA03_02	881	386	1
3	KOMODA03_03	915	402	1
4	KOMODA03_04	915	402	1
5	KOMODA03_05	881	70	1
6	KOMODA03_06	876	203	4
7	KOMODA03_07	350	124	8
8	KOMODA03_08	881	80	2
9	KOMODA03_09_	824	124	4
10	KOMODA03HDF_01	848	444	2
11	KOMODA03HDF_02	855	355	4
12				
13				
14				
15				

