

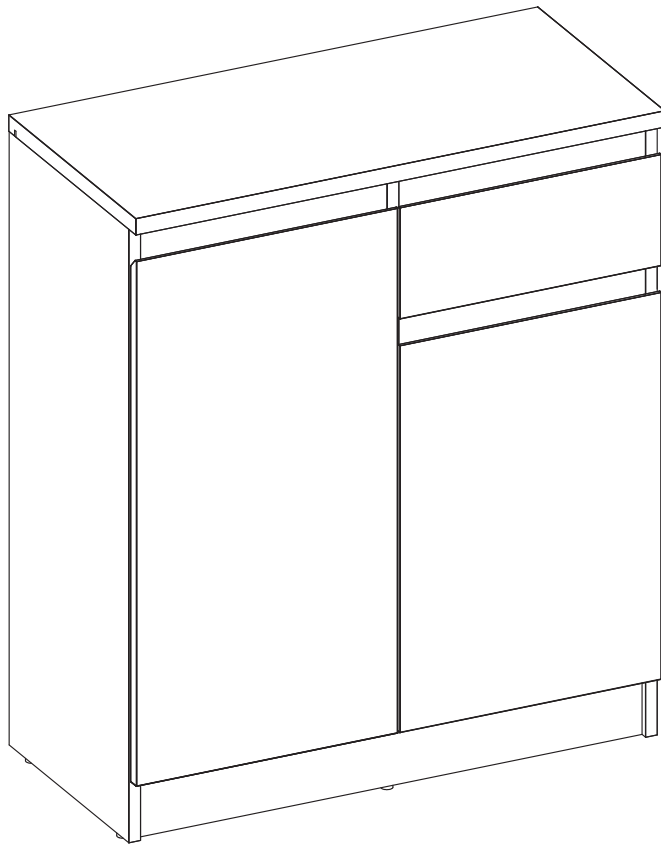
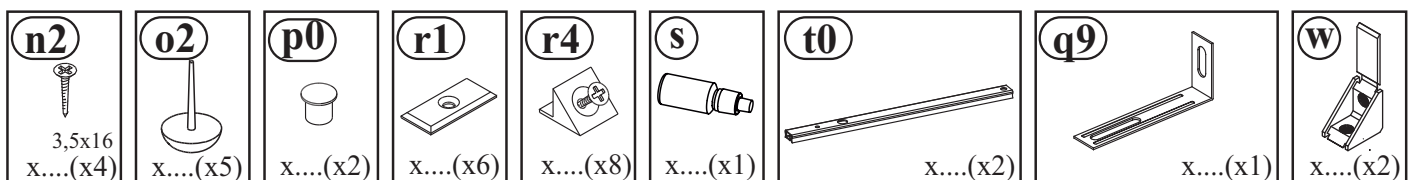
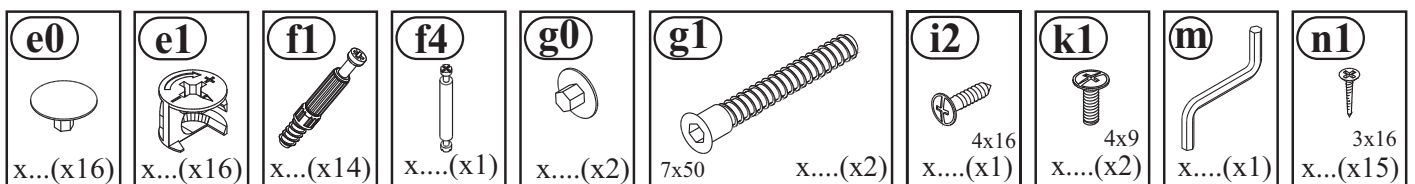


INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITÍ / MONTÁŽNÍ INSTRUKCE  
ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ









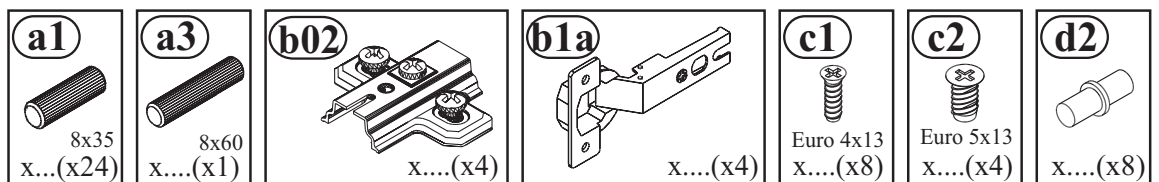


OKUCIA SĄ W PACZCE NR 1. / KOVANIE KTORÉ SA NÁCHADZA V SKRINKE NR 1.  
KOVÁNÍ OBSAŽENÉ V BALENÍ NR 1. / ФУРНИТУРА, НАХОДЯЩАЯСЯ В УПАКОВКЕ NR 1.  
A CSOMAGBAN TALÁLHATÓ BÚTORSZERELVÉNYEK NR 1.



INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITIE / MONTÁŽNÍ INSTRUKCE  
 ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ

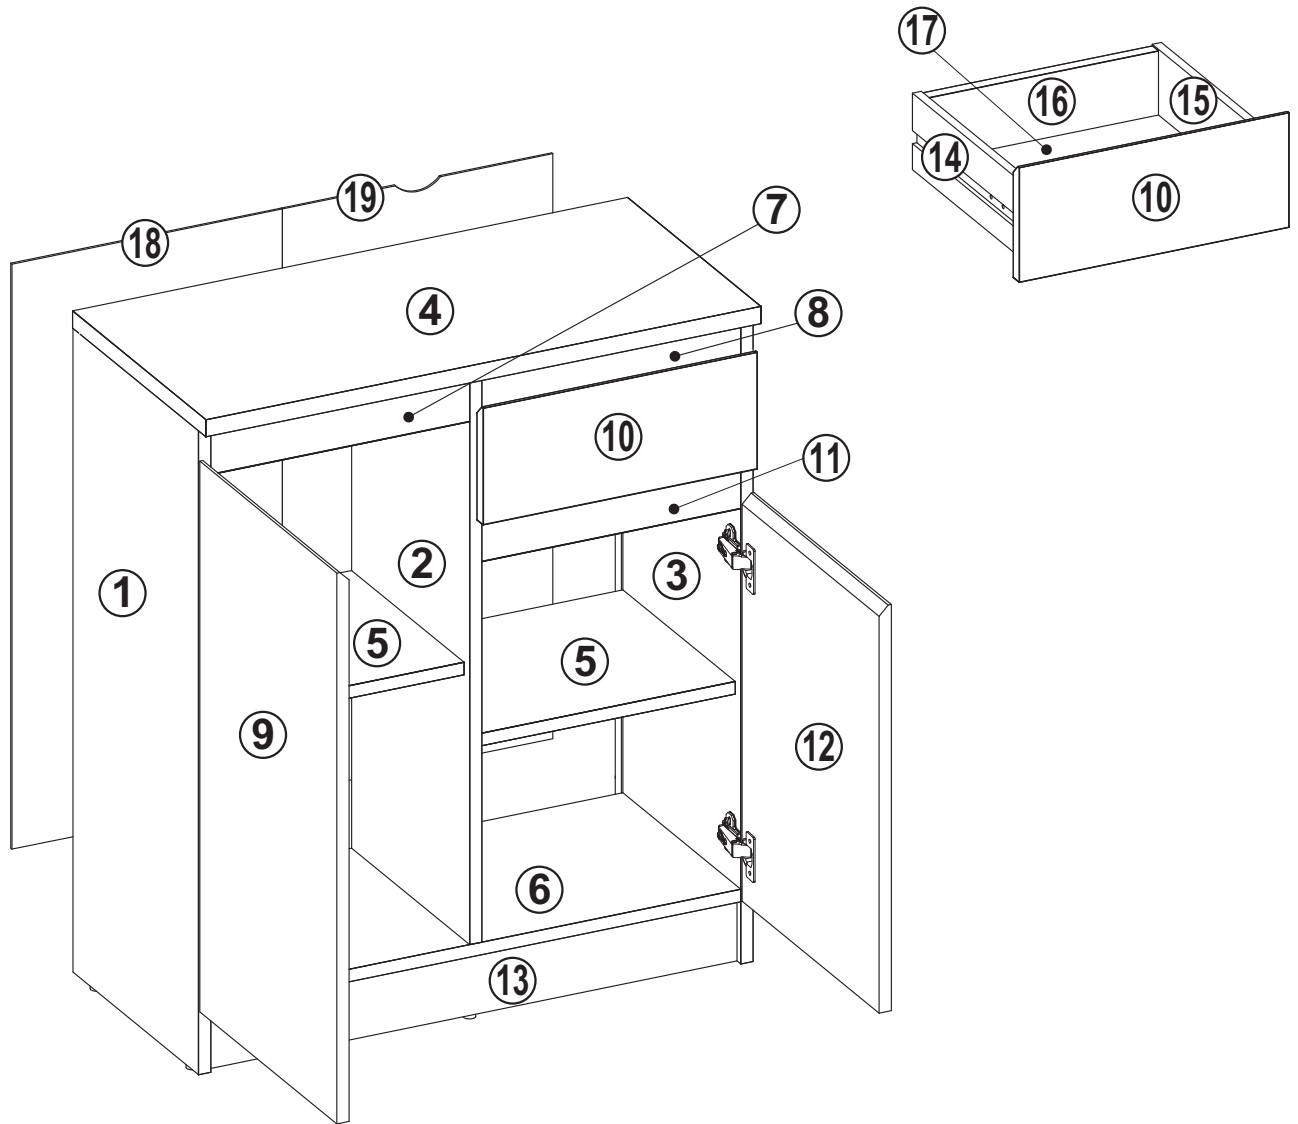



# 1

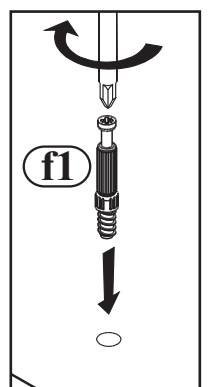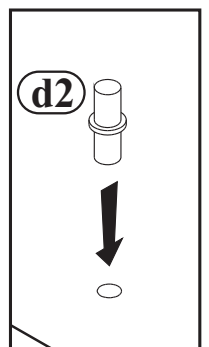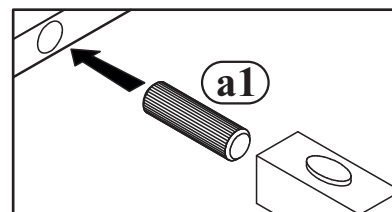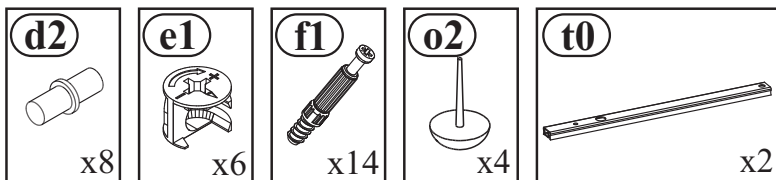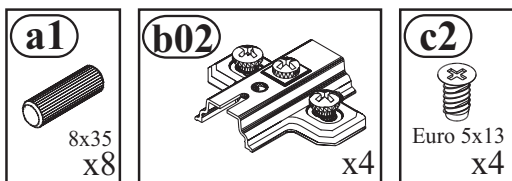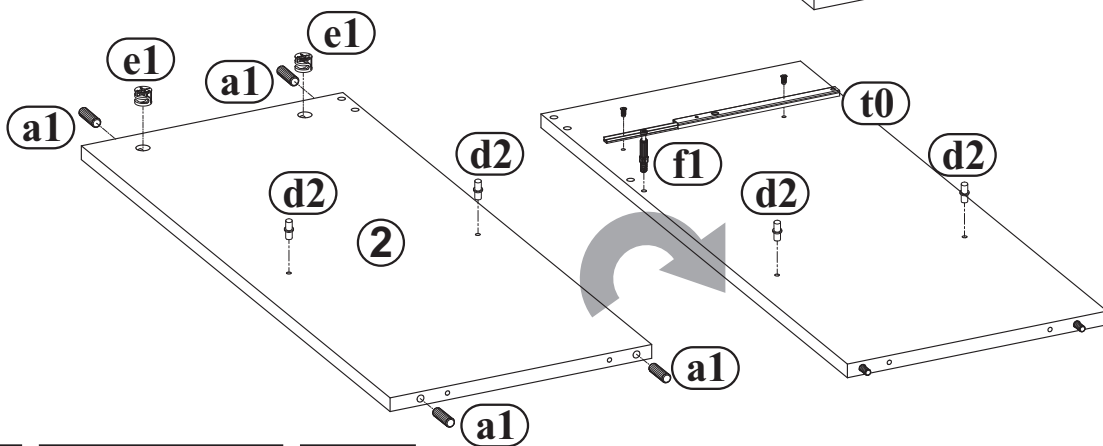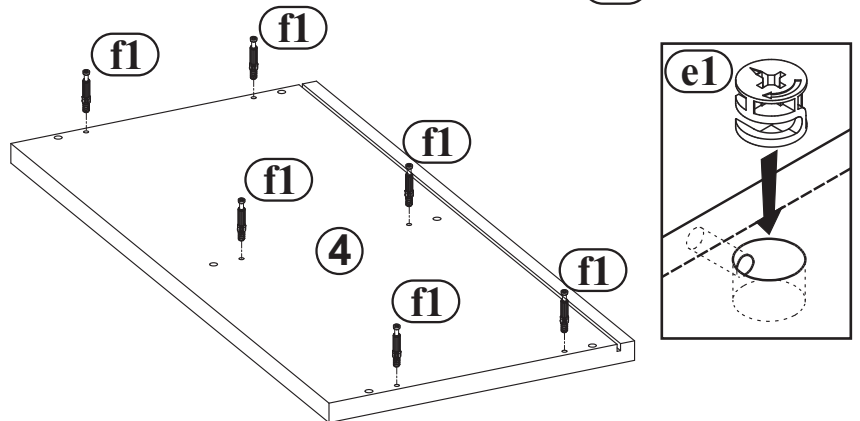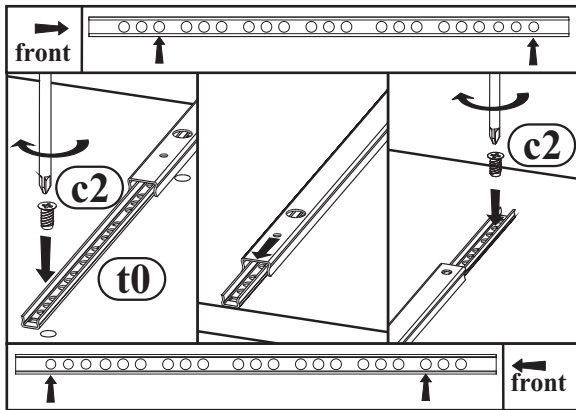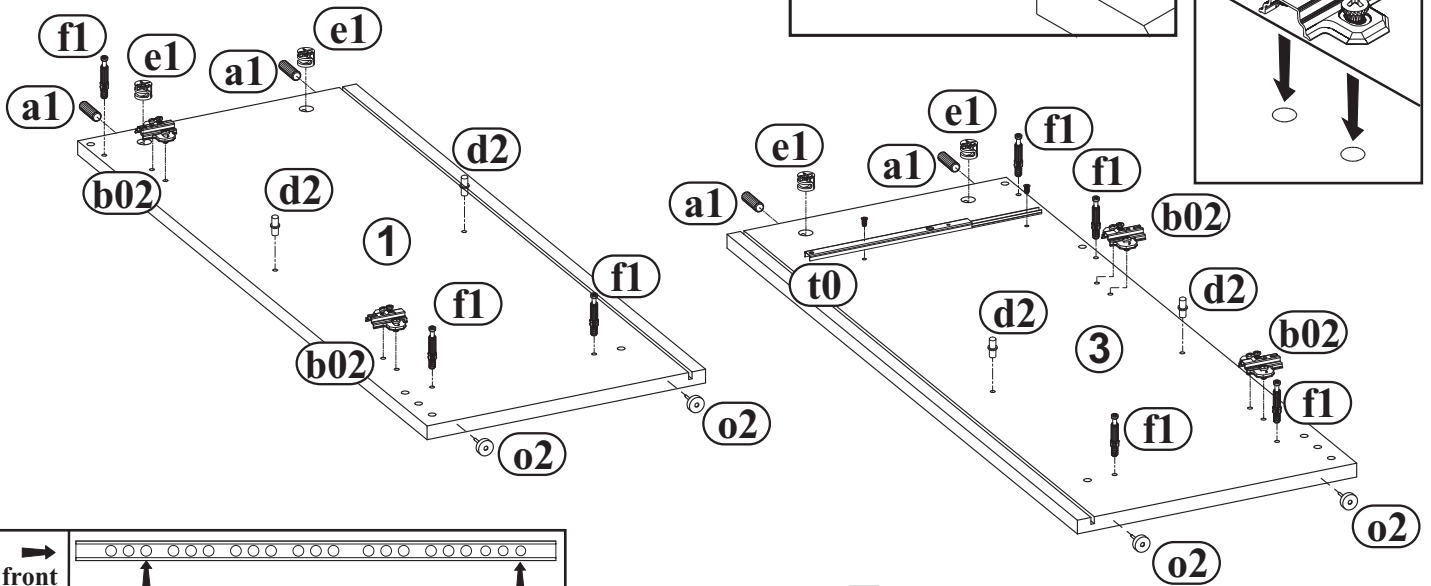






## 2

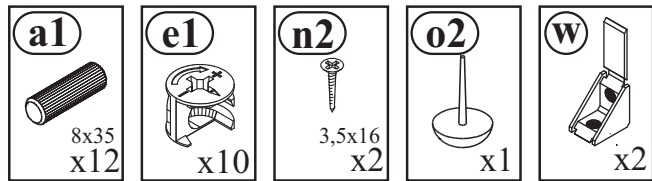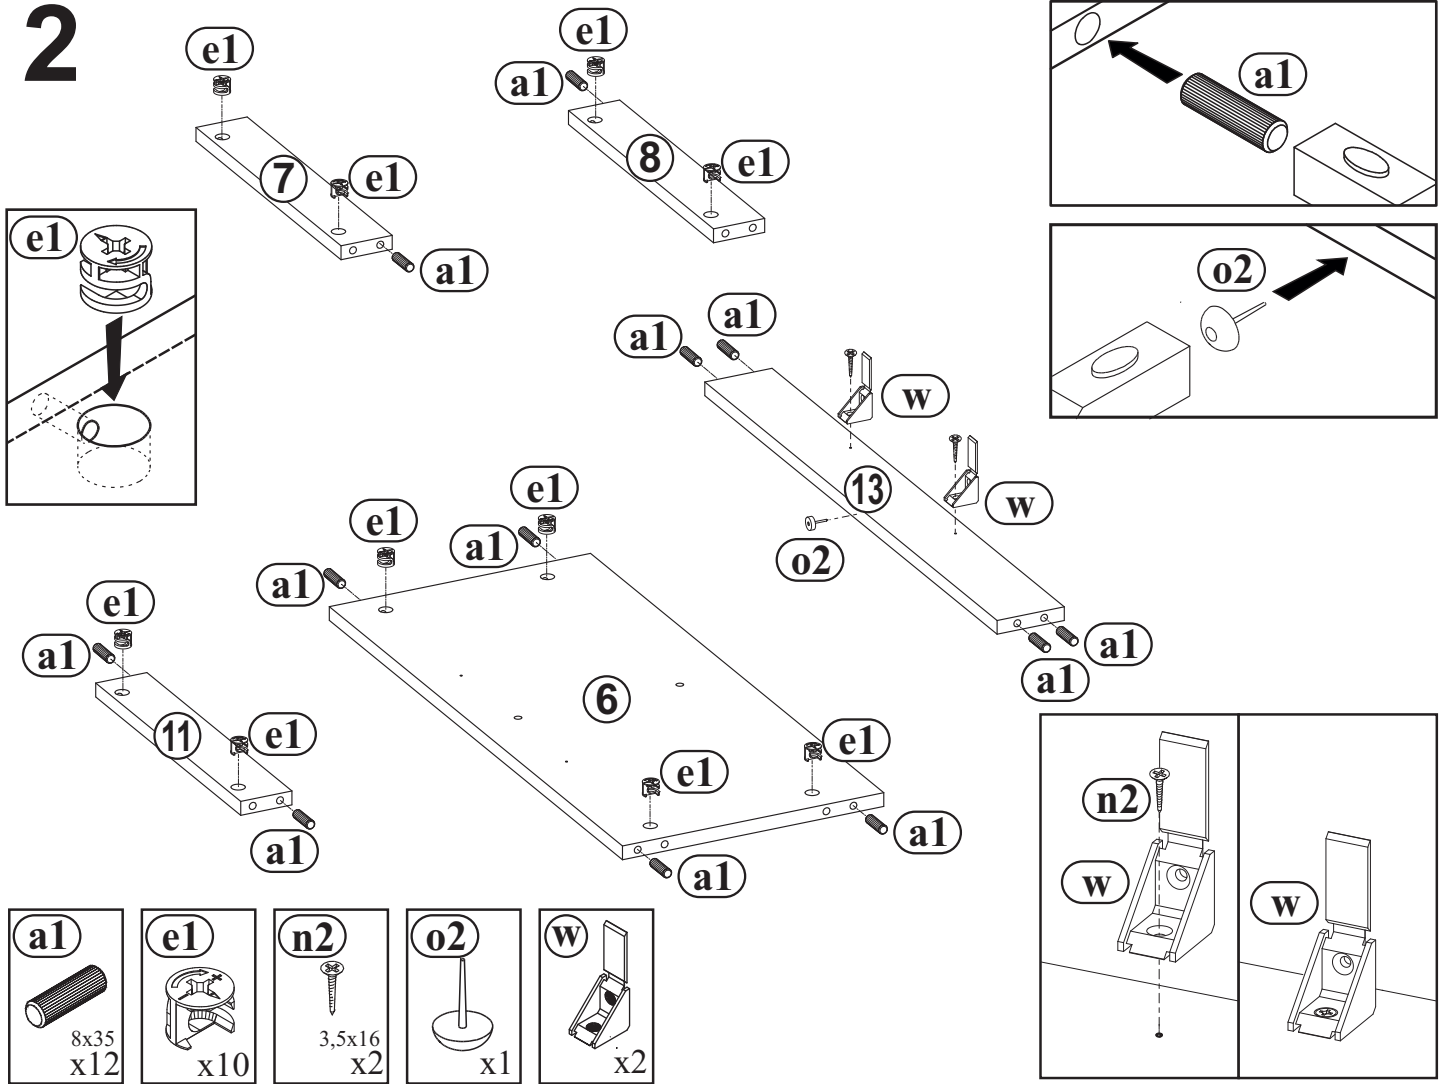








## 3

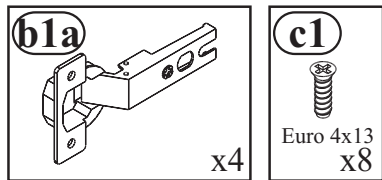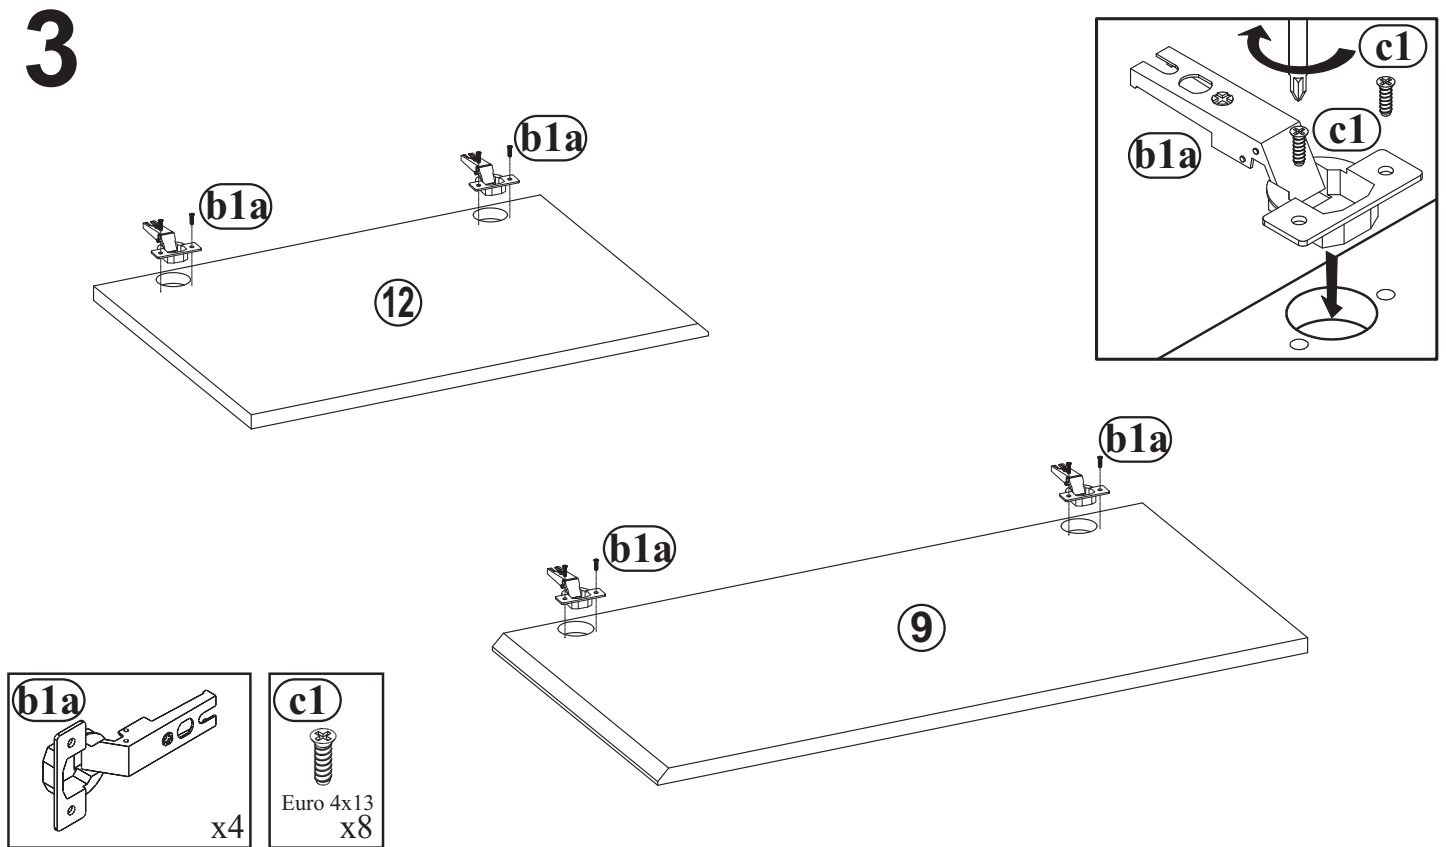







## 4

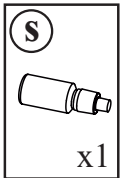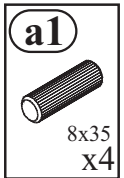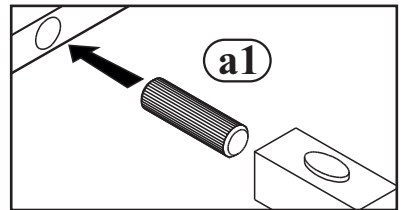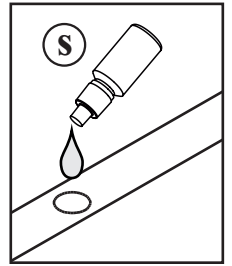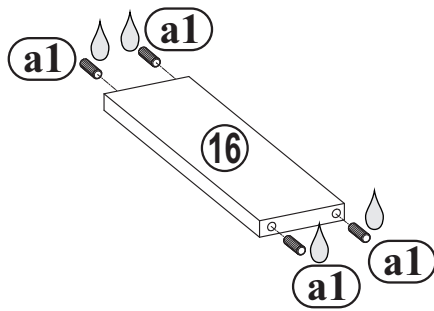







## 5

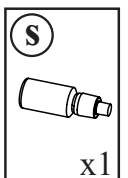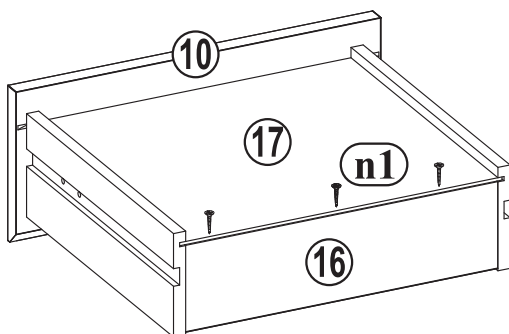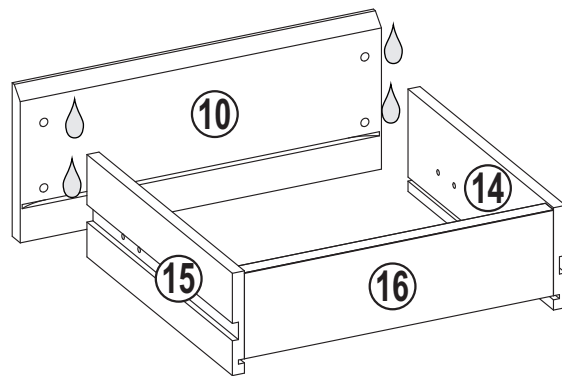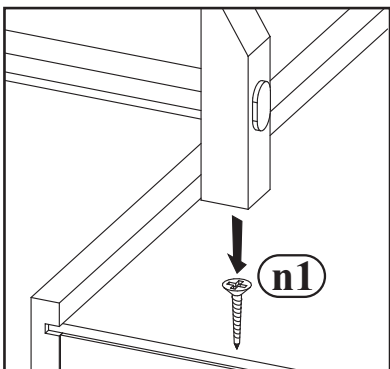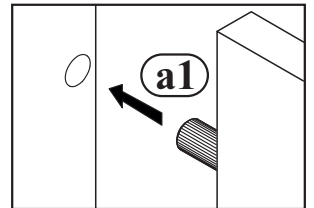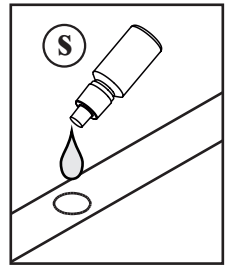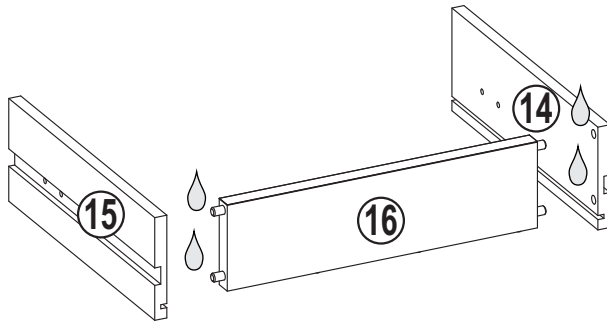





## 6

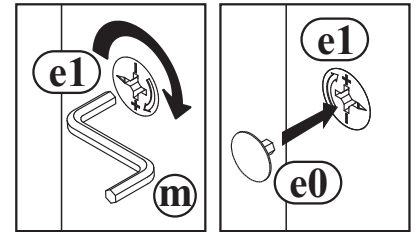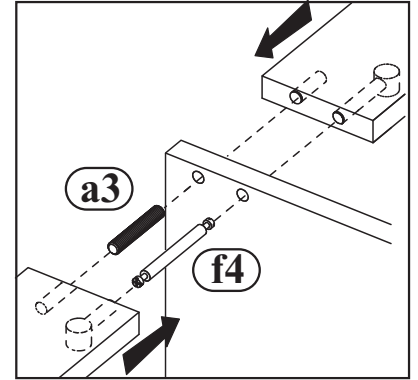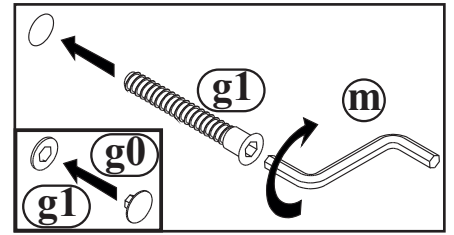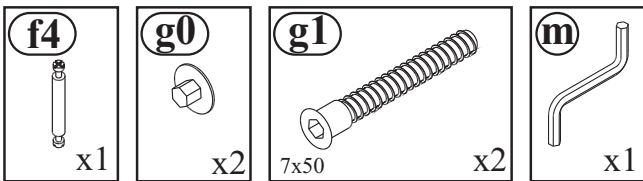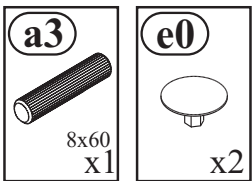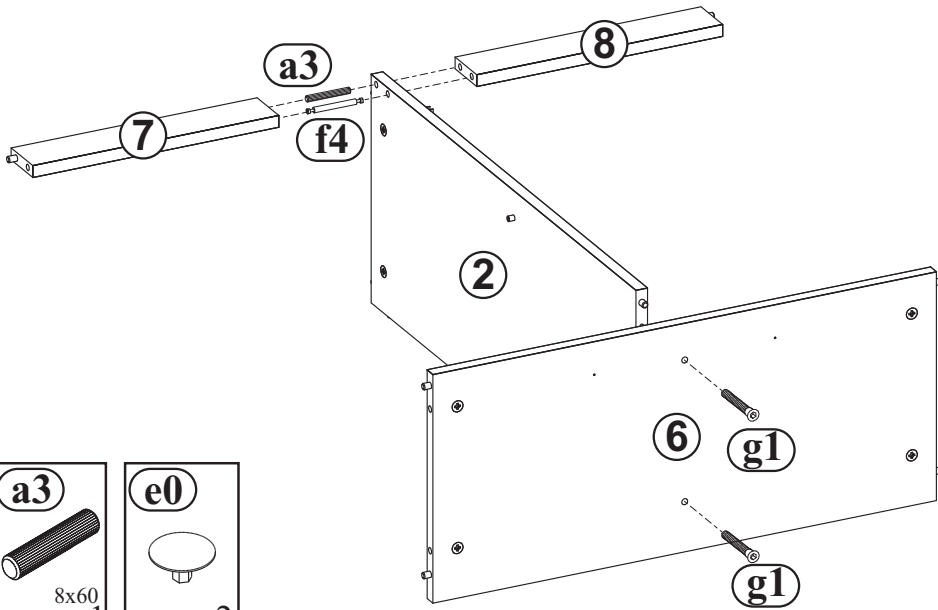






## 7

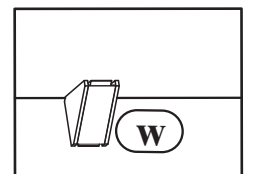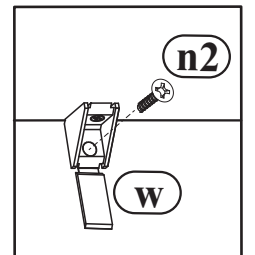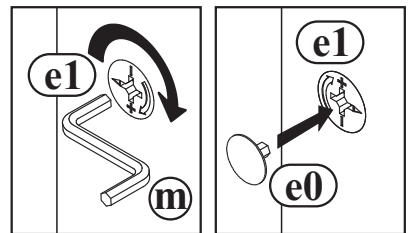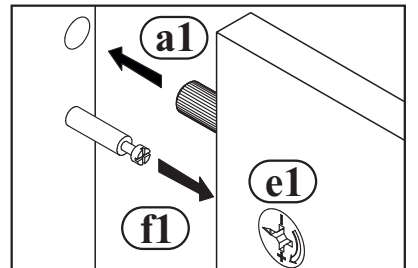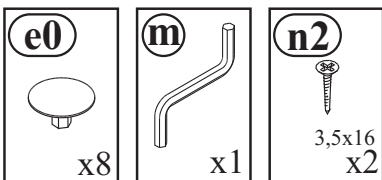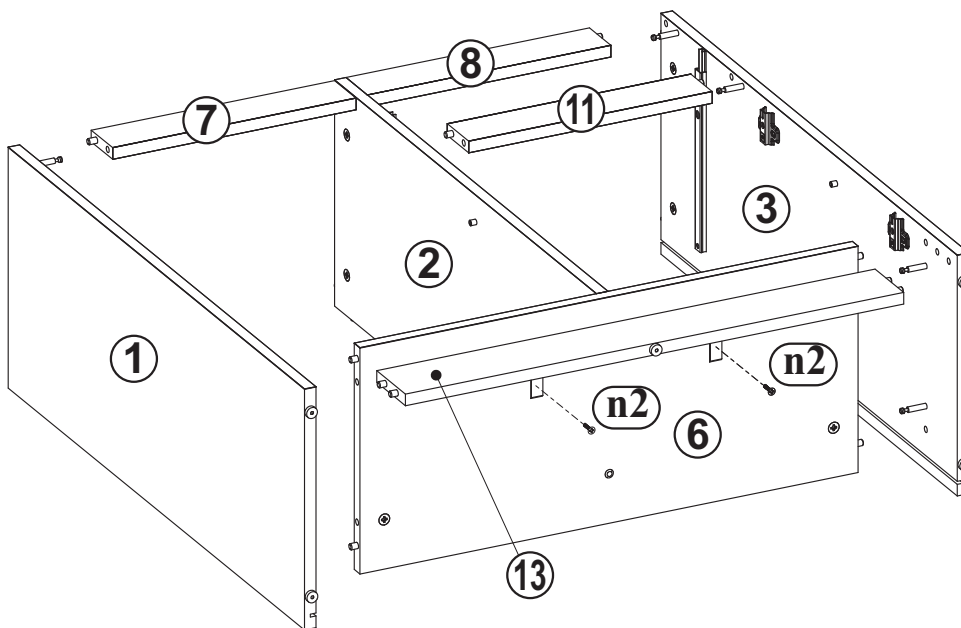

## 8

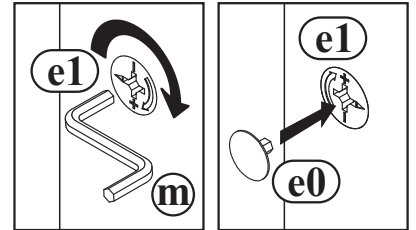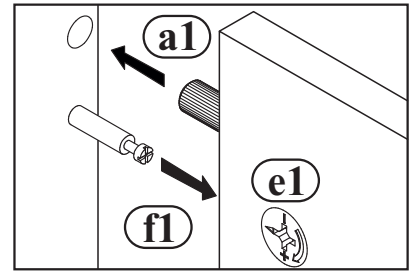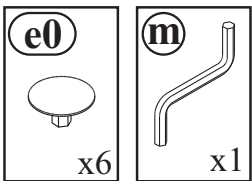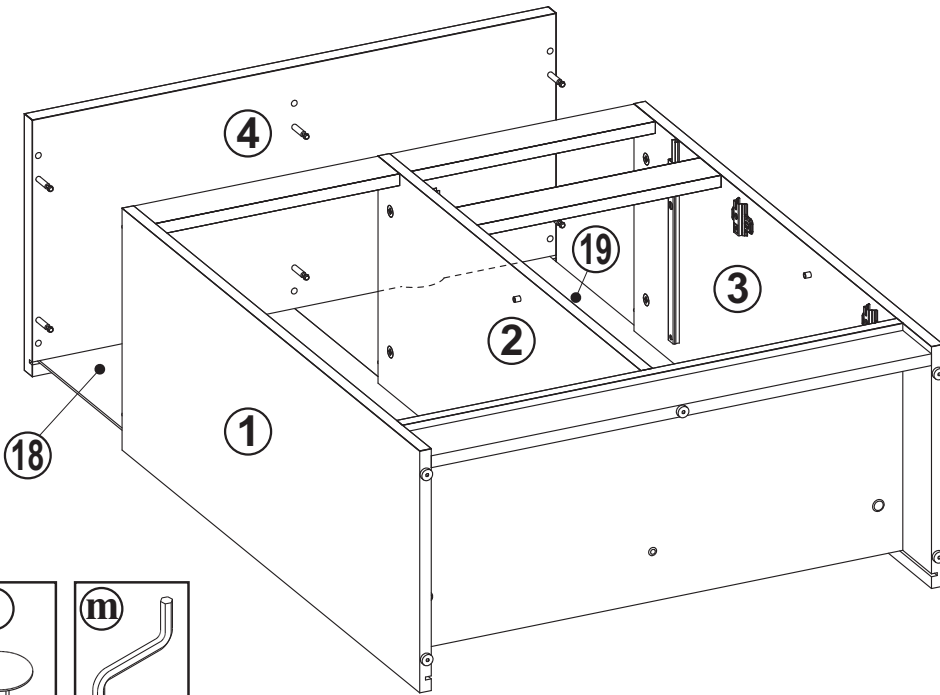

## 9

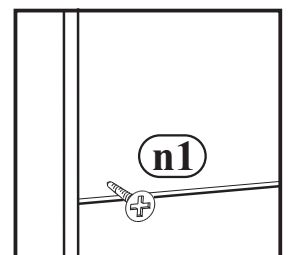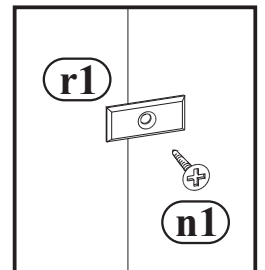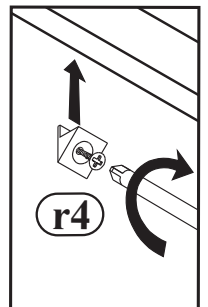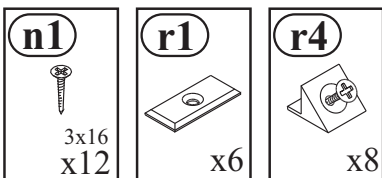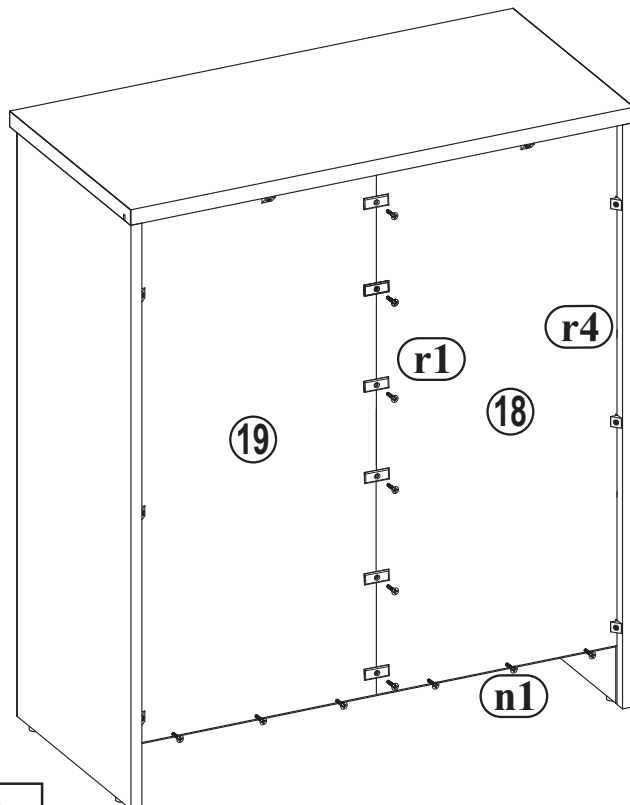

## 10

