

www.MLMEBLE.pl

GB assembly instructions / D montageanleitung / CZ montážní návod / SK montážny návod / RU инструкции по монтажу / LT surinkimo instrukcija




INSTRUKCJA MONTAŻU

OLIWIER 07/S
202 115 64

akcesoria / accessories / zubehör / příslušenství / prislušenstvo / аксесуары / furnitūra :

x 20 KK 8/32	x 20 KT 6,3/50	x 18 ZA N	x 70 GZ 1,4/25	x 5 SG 8/8	x 18 MD	x 18 ZAM	x 12 PA Ø3	x 54 WT 3,5x16	x 1 WT 4x30	x 10 WT 4x27
x 4 WT 3x10	x 8 ZPR	x 8 PK H-0	x 16 WE 6,3x30	x 1 PAL350	x 4 KT 50	x 8 DPP 03	x 2 ZPL	x 2 ZPP	x 5 UTO	x 1 WS L350
x 1 klej / glue / kleber / lepidlo / lepidlo / клеи / kljaj	x 1 klucz / key / schlüssel / klíč / xlūč / ключ / raktas									

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės

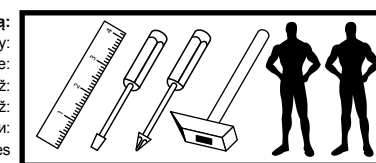

UWAGA! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palic "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

