



www.MLMEBLE.pl

GB D CZ SK RUS LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija




INSTRUKCJA MONTAŻU

KOMODA 04
 94 138 40

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :

x 36 KK 8/32	x 10 KT 6,3/50	x 24 MD	x 16 ZAM	x 8 PA Ø5	x 8 SG 8/8	x 60 WT 3,5x16	x 7 SP	x 4 ZPW	x 4 PK H-4	x 8 WE 6,3x13
x 4 PAL350	x 50 GZ 1,4/25	x 12 BDP	x 2 PK 25	x 6 UT L96	x 12 WT 4x35	x 1 kluczyk / key / schlüssel / klíč / kľúč / ключ / raktas	x 1 klej / glue / kleber / lepidlo / lepidlo / клеј / klĳat			

do montażu potrzebne są:
 are needed for assembly:
 sind erforderlich für die montage:
 jsou potřebné pro montáž:
 sú potrebné pre montáž:
 которые необходимы для сборки:
 Surinkimui reikės:

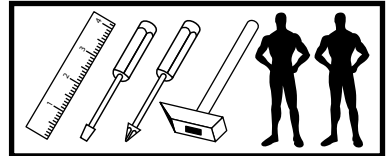

UWAGA! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

	CODE			
1	KOMODA04_01	1375	403	1
2	KOMODA04_02	1340	386	1
3	KOMODA04_03	915	402	1
4	KOMODA04_04	915	402	1
5	KOMODA04_05	829	370	1
6	KOMODA04_06	829	370	1
7	KOMODA04_07	1340	70	2
8	KOMODA04_08	443	203	4
9	KOMODA04_09	443	822	1
10	KOMODA04_10	443	822	1
11	KOMODA04_11	350	124	8
12	KOMODA04_12	440	349	2
13	KOMODA04_13	369	124	4
14	KOMODA04_14	426	80	1
15	KOMODA04HDF_01	848	452	2

	CODE			
16	KOMODA04HDF_02	848	442	1
17	KOMODA04HDF_03	395	355	4
18				
19				
20				
21				

