



www.MLMEBLE.pl

GB

D

CZ

SK

RUS

LT

assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija



INSTRUKCJA MONTAŻU

SZAFKA 05


↑ 83 → 50 ↗ 40




akcesoria / accessories / Zubehör / příslušenství / príslušenstvo / аксесуары / furnitūra :


x 10 KK 8/32	x 6 KT 6,3/50	x 4 ZAK	x 4 MD	x 8 PA Ø5	x 3 PO Ø5 E	x 3 RN	x 50 GZ 1,4/25
x 4 UT L96	x 1 PA L300	x 4 SG 8/8	x 12 WT 3,5x16	x 8 WT 4x35	x 12 WT 3x16	x 6 BDK	x 1 kluczyk / key / schlüssel / klíč / klūč / ключ / raktas
x 1 klej / glue / kleber / lepidlo / lepidlo / клей / klījai	x 4 ZAK						

do montażu potrzebne są:
 are needed for assembly:
 sind erforderlich für die montage:
 jsou potřebné pro montáž:
 sú potrebné pre montáž:
 которые необходимы для сборки:
 Surinkimui reikės

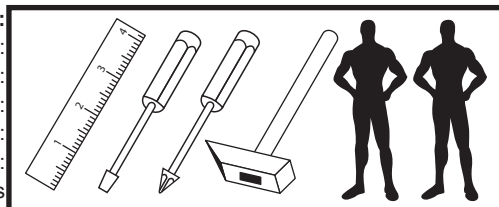



	CODE			
1	SZAFKA05_01	498	400	1
2	SZAFKA05_02	810	385	1
3	SZAFKA05_03	461	384	1
4	SZAFKA05_04	461	60	1
5	SZAFKA05_05	460	287	2
6	SZAFKA05_06	456	195	3
7	SZAFKA05_07	459	127	1
8	SZAFKA05_08	404	80	1
9	SZAFKA05_09	300	80	2
10	SZAFKA05_10	810	385	1
11	SZAFKA05HDF_01	762	243	2
12	SZAFKA05HDF_02	435	303	1
13				
14				
15				

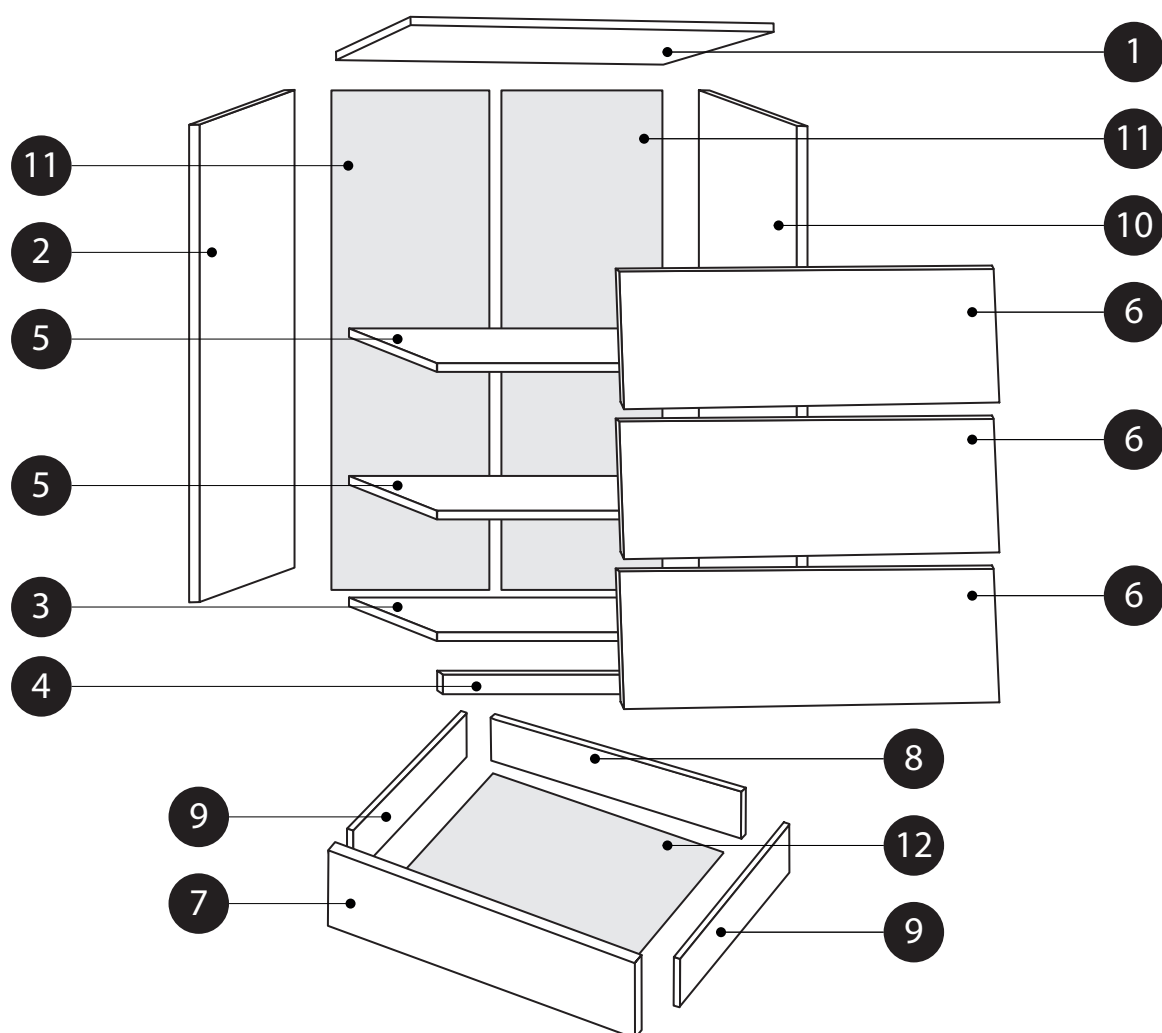

! UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĖMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

